

**TECHNICAL DATA** 

# Fluke i200s AC Current Clamp

#### ×

#### **Key features**

- Companion to your scopemeter, power quality meter or digital multimeter to measure up to 200 A AC
- Included adapter for DMM's
- Two ranges: 20 A & 200A, 10 or 100 mV/ Amp output
- Take accurate current readings without breaking the circuit
- Max. conductor Ø 20 mm
- CAT III 600V safety rating

#### Product overview: Fluke i200s AC Current Clamp

Fluke Current clamps are the ideal tools to extend the current ranges of Fluke tools. The i200s is a dual range 20A and 200A ac current clamp with voltage output via a safety insulated BNC connector. A dual banana to BNC adapter is supplied to allow the i200s to be connected to multimeters with banana inputs.

### Specifications: Fluke i200s AC Current Clamp

| Specifications                        |   |  |
|---------------------------------------|---|--|
| Nominal current range                 | 20 A<br>200 A   |  |
| Continuous current range              | 0.1 A - 24 A<br>0.5 A - 200 A                         |  |
| Maximum non-destructive               | 240 A   |  |
| Lowest measurable current             | 0.1 A   |  |
| Basic accuracy                        | 1.5% + 0.5 A<br>(48-65 Hz)<br>(% reading + floorspec) |  |
| Useable frequency                     | 40 Hz - 10 kHz  |  |
| Output level(s)                       | 100 mV/A<br>10mV/A                                    |  |
| Safety Specifications                 |   |  |
| Safety                                | CAT III, 600 V  |  |
| Maximum voltage                       | 600 V AC  |  |
| Mechanical and General Specifications |   |  |
| Warranty                              | 1 year  |  |
| Maximum conductor diameter            | 20 mm   |  |
| Maximum conductor size (busbar)       | 20 x 5 mm   |  |
| Output cable length                   | 2 m   |  |
| BNC Adapter                           | Yes   |  |



| BNC to banana adapter included | Yes |  |
|--------------------------------|-----|--|
|--------------------------------|-----|--|



## **Ordering information**



FLK-i200s Fluke i200s AC Current Clamp



#### Fluke. Keeping your world up and running.®

Fluke Europe B.V. P.O. Box 1186 5602 BD Eindhoven The Netherlands www.fluke.com/en ©2024 Fluke Corporation. All rights reserved. Data subject to alteration without notice. 07/2024

Modification of this document is not permitted without written permission from Fluke Corporation.

For more information call:

In Middle East/Africa

+31 (0)40 267 5100